

MONTERINGSANVISNING



Fabrikat
Citroën

Modell
Berlingo 2008-

Modelltyp

G* KFW*

G* NFU*

G* WJY*

G* RHY*

E-godkännande

e2*2001/116*0275*00

e2*2001/116*0276*00

e2*2001/116*0277*00

e2*2001/116*0278*00

Peugeot

Partner 2008-

G* KFW*

G* NFU*

G* WJY*

G* RHY*

e2*2001/116*0279*00

e2*2001/116*0280*00

e2*2001/116*0281*00

e2*2001/116*0282*00



Montagetid
30 minuter



x6



x6



M8 x 60, x2



M8 x 70, x2



M8 x 50, x2

FRONT

M8 x 60

M8 x 70

M8 x 50



1)




2)



3)



4)

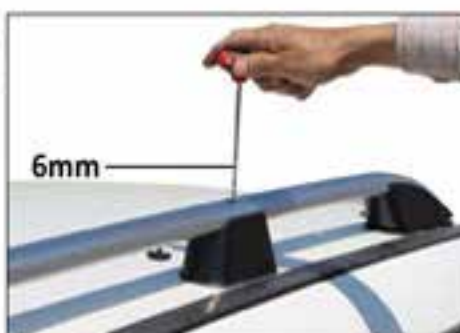

5)



6)

